

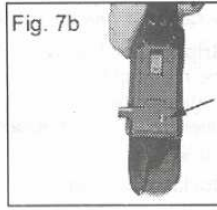


Baikal IZH-35M

Adjustable Rear Sight: Located at the rear of the gun above the grip. The screw on the right hand side of the sight adjust for windage, clock wise turning will move the rear blade to the right side. The screw in the center of the sight on the top adjusts elevation, clockwise turning moves the rear blade up. (See Fig: 7a & 7b)

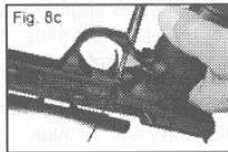

Trigger: Has three adjustments. The screw in the trigger adjust fore and aft location of the trigger. The forward screw located on the trigger base adjust trigger over travel and the aft screw located on the trigger base adjust trigger take up. (See Fig: 8a, 8b, 8c)




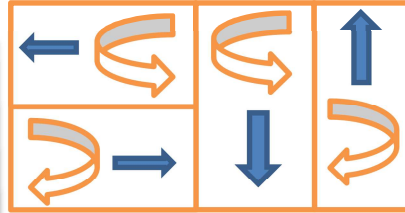


Baikal IZH-35M

Adjustable Rear Sight: Located at the rear of the gun above the grip. The screw on the right hand side of the sight adjust for windage, clock wise turning will move the rear blade to the right side. The screw in the center of the sight on the top adjusts elevation, clockwise turning moves the rear blade up. (See Fig: 7a & 7b)



Trigger: Has three adjustments. The screw in the trigger adjust fore and aft location of the trigger. The forward screw located on the trigger base adjust trigger over travel and the aft screw located on the trigger base adjust trigger take up. (See Fig: 8a, 8b, 8c)

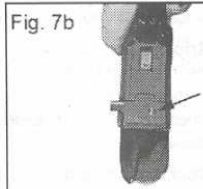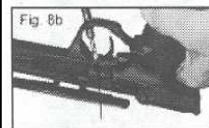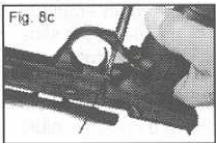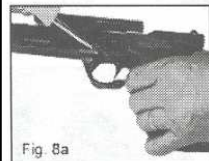

Magazine Release Button: Button type push to release magazine located on left hand side of grip on lower portion of grip. (See Fig: 9)